

02_Contents

Thank you for choosing Clarity by Creatif — a super-slim glass moving wall system that is as subtle and stylish as it is robust.

This guide is designed to walk you through how to use the Clarity system.

For technical drawings, please contact Creatif.

Page 03 - 08 Operation Guide
Page 09 Cleaning & Maintenance
Page 10 Contact

_//



Do you have a problem with your moving wall system or do you want to ask a question?

Email: service@creatif.org.uk

Guarantees

All materials were supplied by, or on behalf of, Creatif and manufactured in our factory.


All materials are guaranteed for 12 months from the date of installation, with the exception of component failure caused as a result of misuse or neglect.

03_Operation Guide 1 of 6

This guide assumes that your system is open. If your system is closed, then please complete this process in the reverse order.

Step 1


Remove the stacked panels one by one. To do this, hold the first panel upright with both hands at shoulder height and steadily guide it along the ceiling track.

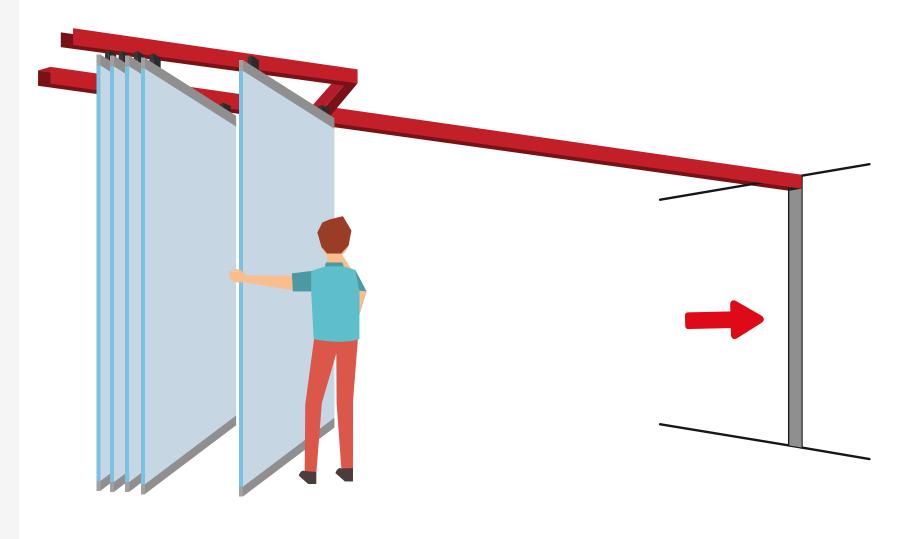

04_Operation Guide 2 of 6

Step 2

Gently push the panel across the ceiling track and place it against the wall moulding on the opposite side of the track.

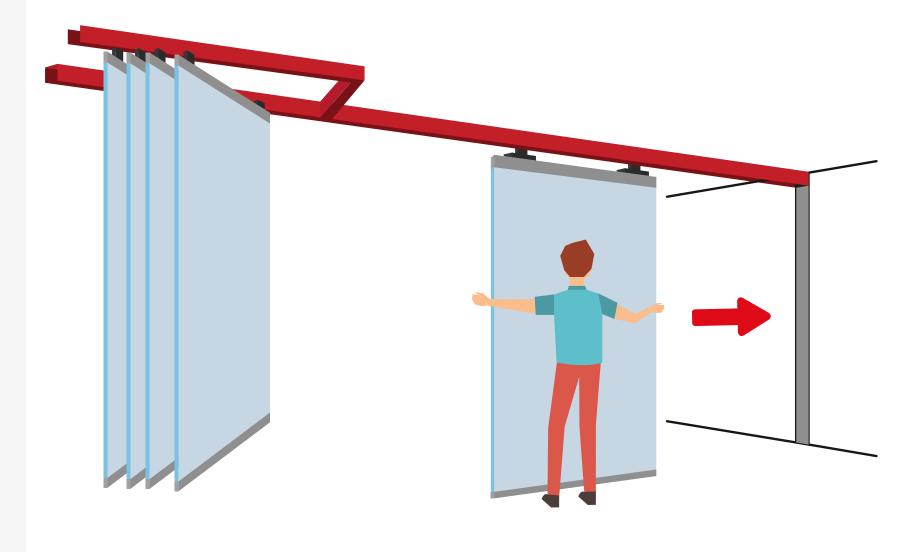


05_Operation Guide 3 of 6

Step 3

With the first panel in place, you can now secure it in position.

To do this, make sure the floor bolt, located towards the bottom of the glass panel, is aligned with its accompanying floor socket.

Once in place, you can engage the floor bolt.

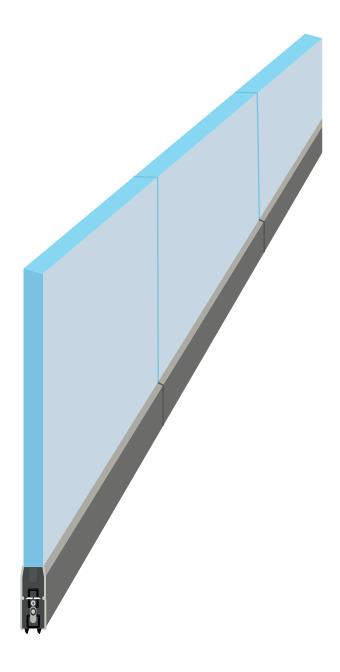






06_Operation Guide 4 of 6

Step 4

Now it's time to move all the other panels in position. Repeat steps 1-3 with each panel until all panels are in position, forming a wall.


Note: Take care to ensure the panels don't collide

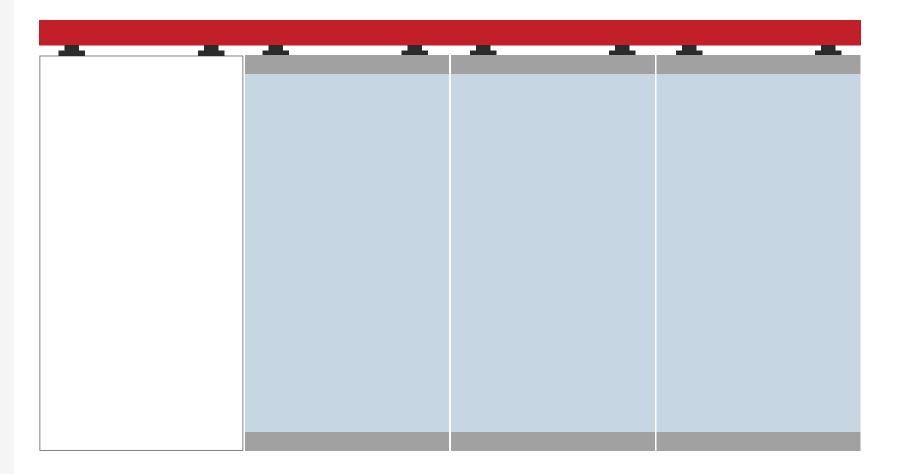

07_Operation Guide 5 of 6

Step 5

The last panel has an operating bolt. Slide this panel carefully into position and use your foot to engage this bolt into its floor socket.

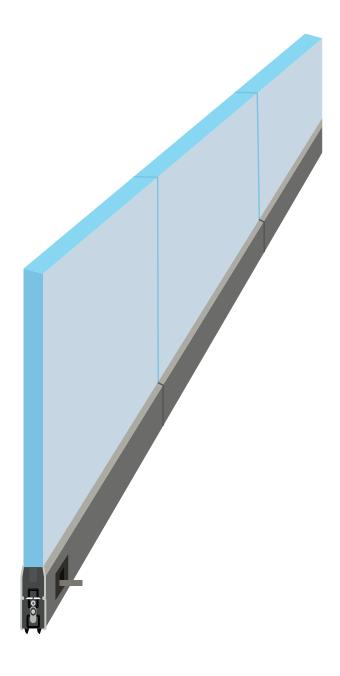




08_Operation Guide 6 of 6

Step 6

Finally, make sure that all the panels are aligned correctly and are in a straight line, parallel with the ceiling track.

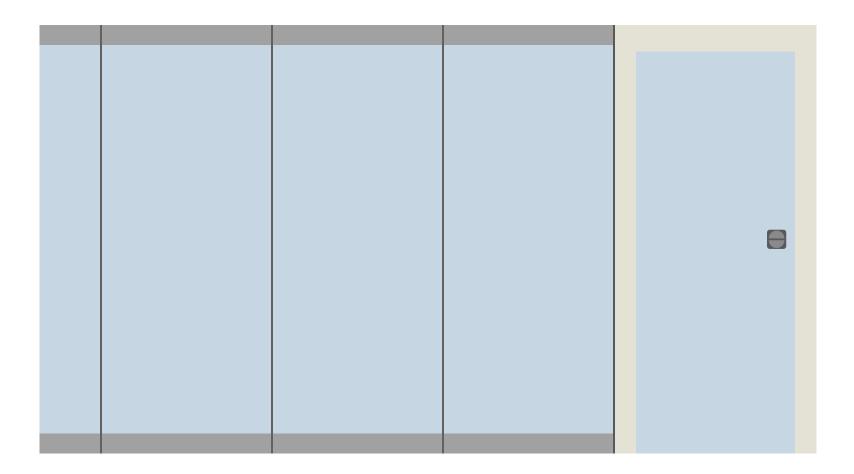



09_Cleaning & Maintenance


Clarity requires very little maintenance, with the obvious exceptions of keeping the track free from dirt and foreign objects, and cleaning both the glazing and aluminium profiles on a regular basis.

All Clarity systems with a standard finish can be cleaned with a damp cloth and wiped dry with a fresh, clean cloth.

We recommend that you avoid scrubbing and the use of bleach-based cleaning products.

For more info on a service contract, system usage or to activate your warranty, give us a call or send an email:

service@creatif.org.uk

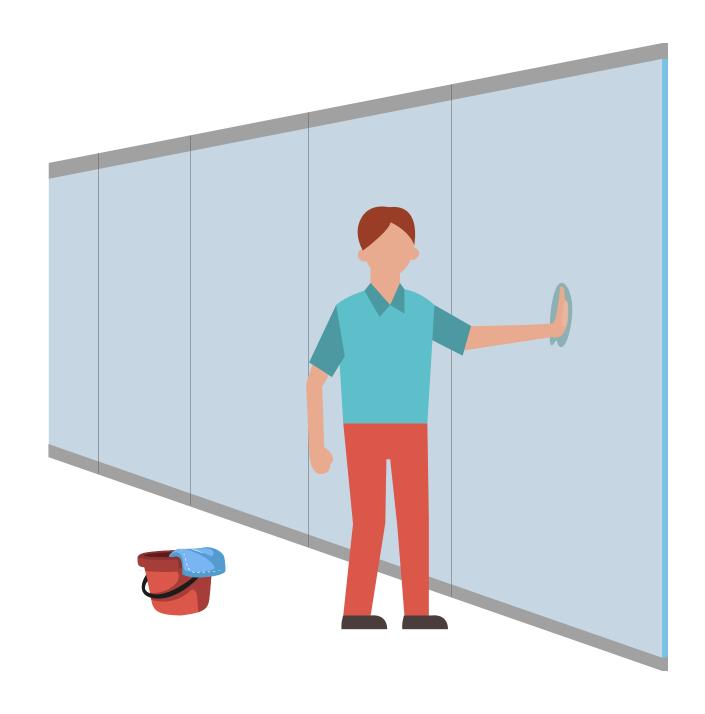

10_Contact

If you have any questions about your moving wall system, or would like to find out more about our servicing packages, please get in touch;

T: +44 (0) 113 270 1239 **E:** service@creatif.org.uk

www.creatif.org.uk



Do you have a question?

Want to discuss servicing options?

Get in touch!