



# Solo Acoustic Operable Moving Walls (Semi-Automatic Operation)

Operation & Maintenance Manual

[www.creatif.org.uk](http://www.creatif.org.uk)

## 02\_Contents

Thank you for choosing Solo by Creatif - the ultimate moving wall system in terms of acoustic integrity, achieving the very highest possible sound ratings.

This guide is designed to walk you through how to use the semi-automatic version of our Solo system.

**For technical drawings, please contact Creatif.**

---

<b>Page 03-05</b>	Operation Guide
<b>Page 06</b>	Cleaning & Maintenance
<b>Page 07</b>	Contact

---

### Servicing

Do you have a problem with your moving wall system or do you want to ask a question?

Email: [service@creatif.org.uk](mailto:service@creatif.org.uk)

### Guarantees

All materials were supplied by, or on behalf of, Creatif and manufactured in our factory.

All materials are guaranteed for 12 months from the date of installation, with the exception of component failure caused as a result of misuse or neglect.

---

## 03\_Operation

### Guide 1 of 5


This guide assumes your system is closed (forming a wall). If your system is open (stacked), please complete this process in reverse order.

#### Step 1

First, locate the “Expanding Jamb” - this is the part of the Solo system that is attached to your fixed wall.

On the Expanding Jamb you will find a keyhole and a small switch. First, insert your silver turning key into the keyhole and turn to activate power.

Next, press and hold the switch until the Expanding Jamb has fully opened, allowing you to see through to the other side of the wall.

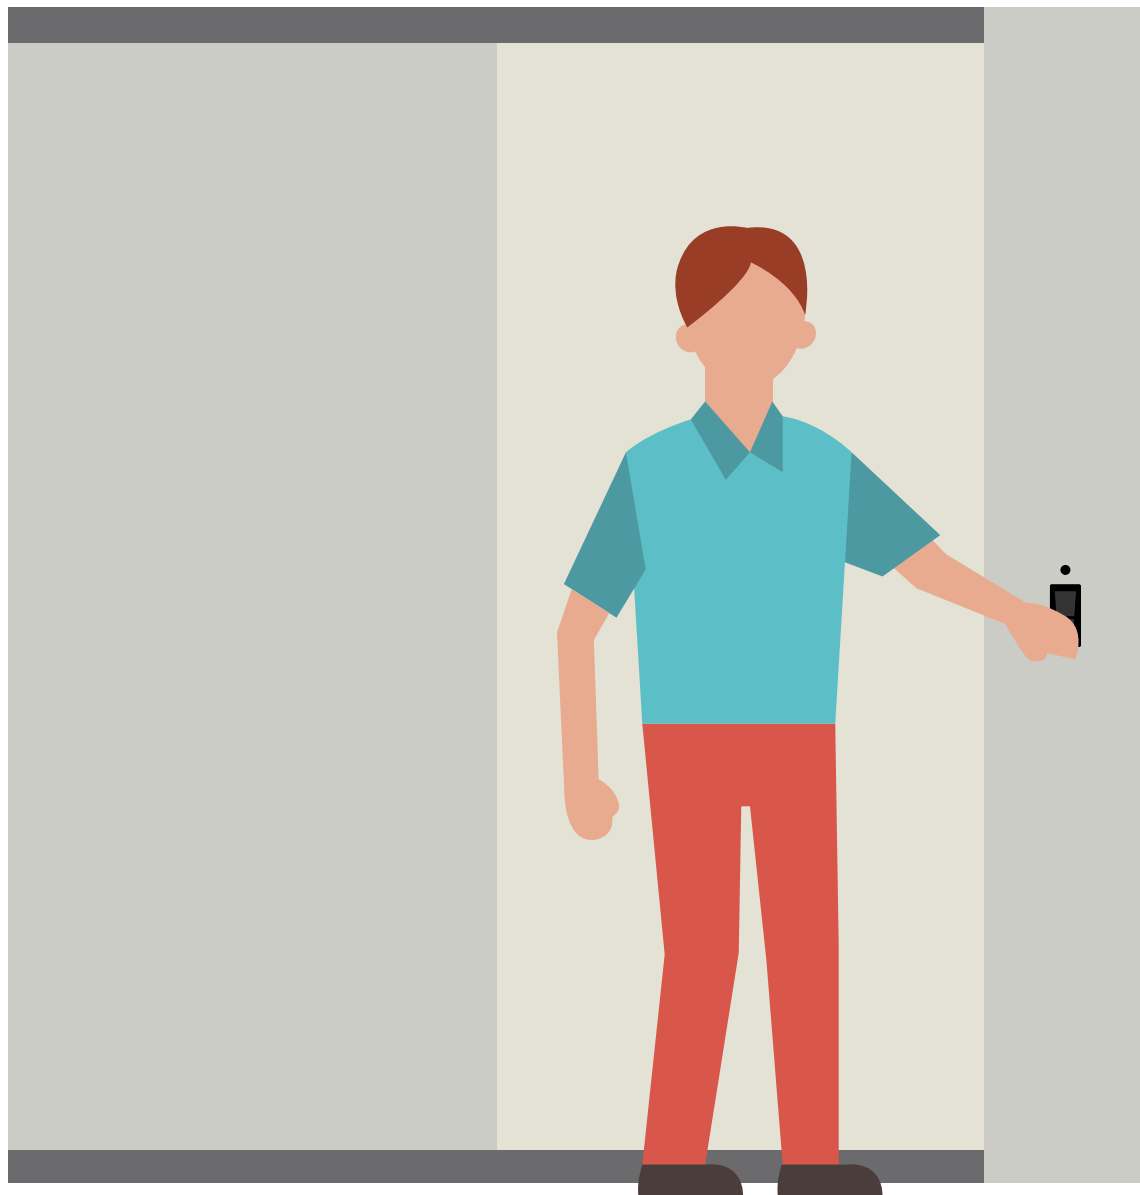

## 04\_Operation Guide 2 of 5


### Step 2

Next, it's time to move the first panel.

On the profile of the first panel after the Expanding Jamb, locate the switch situated between two green LEDs.

Press and hold the switch, and do not release until both lights turn green simultaneously (note that they will both go off when the seal is released).

This releases the acoustic seal at both the top and bottom edge of the panel.

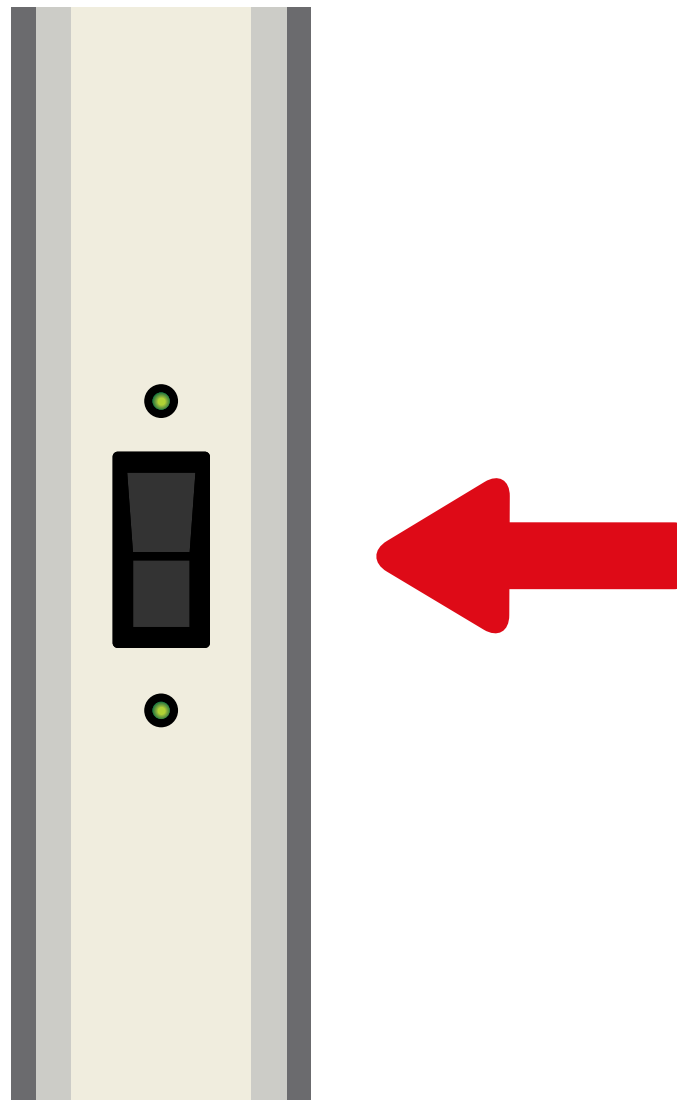

## 05\_Operation Guide 3 of 5

### Step 3


Once the acoustic seals have been released, it's time to move your panel.

Simply hold each edge with one hand and steadily move the panel along the ceiling track. Move to your stacking location and leave the panel.



Avoid hard collisions with other panels to prevent damage.

Please note that when performing this procedure in reverse, panels must be touching in order for the electrical current to be completed, allowing the switches to work.


Repeat this and the previous step for all remaining panels.

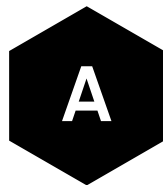

### Move the panel

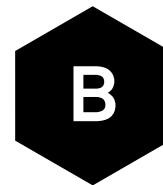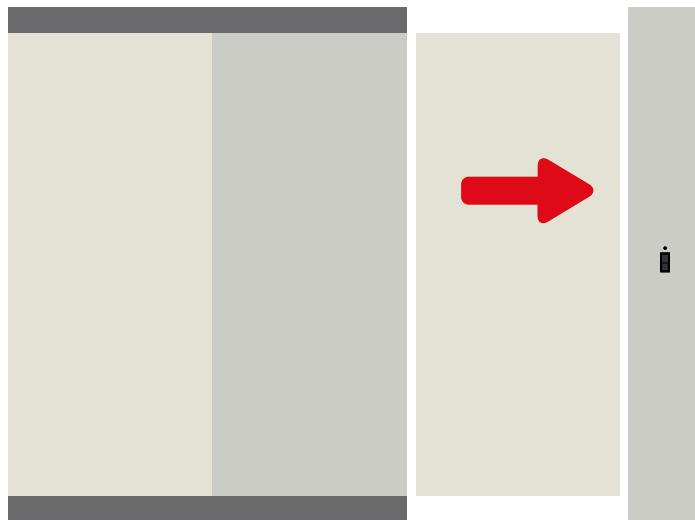

### Rotate & stack (aerial view)

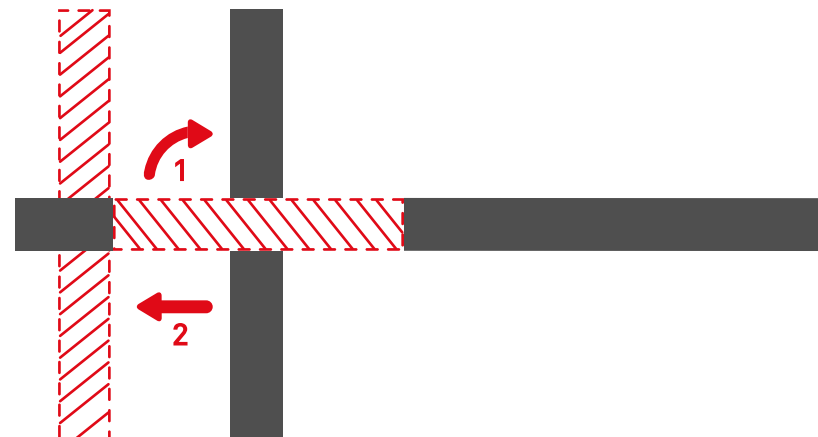

---

## 06\_Cleaning & Maintenance


Solo requires very little attention, with the obvious exception of keeping the track free of dirt and objects.

All systems featuring panels with a standard finish can be cleaned with a damp cloth and dried with a dry cloth immediately after.

Side profiles and the acoustic seals can be cleaned with a damp cloth and, again, should be dried with a dry cloth.

We recommend that you avoid scrubbing and the use of bleach-based cleaning products.

For more information on a service contract, system usage or to activate your warranty, give us a call or send an email:  
**[service@creatif.org.uk](mailto:service@creatif.org.uk)**

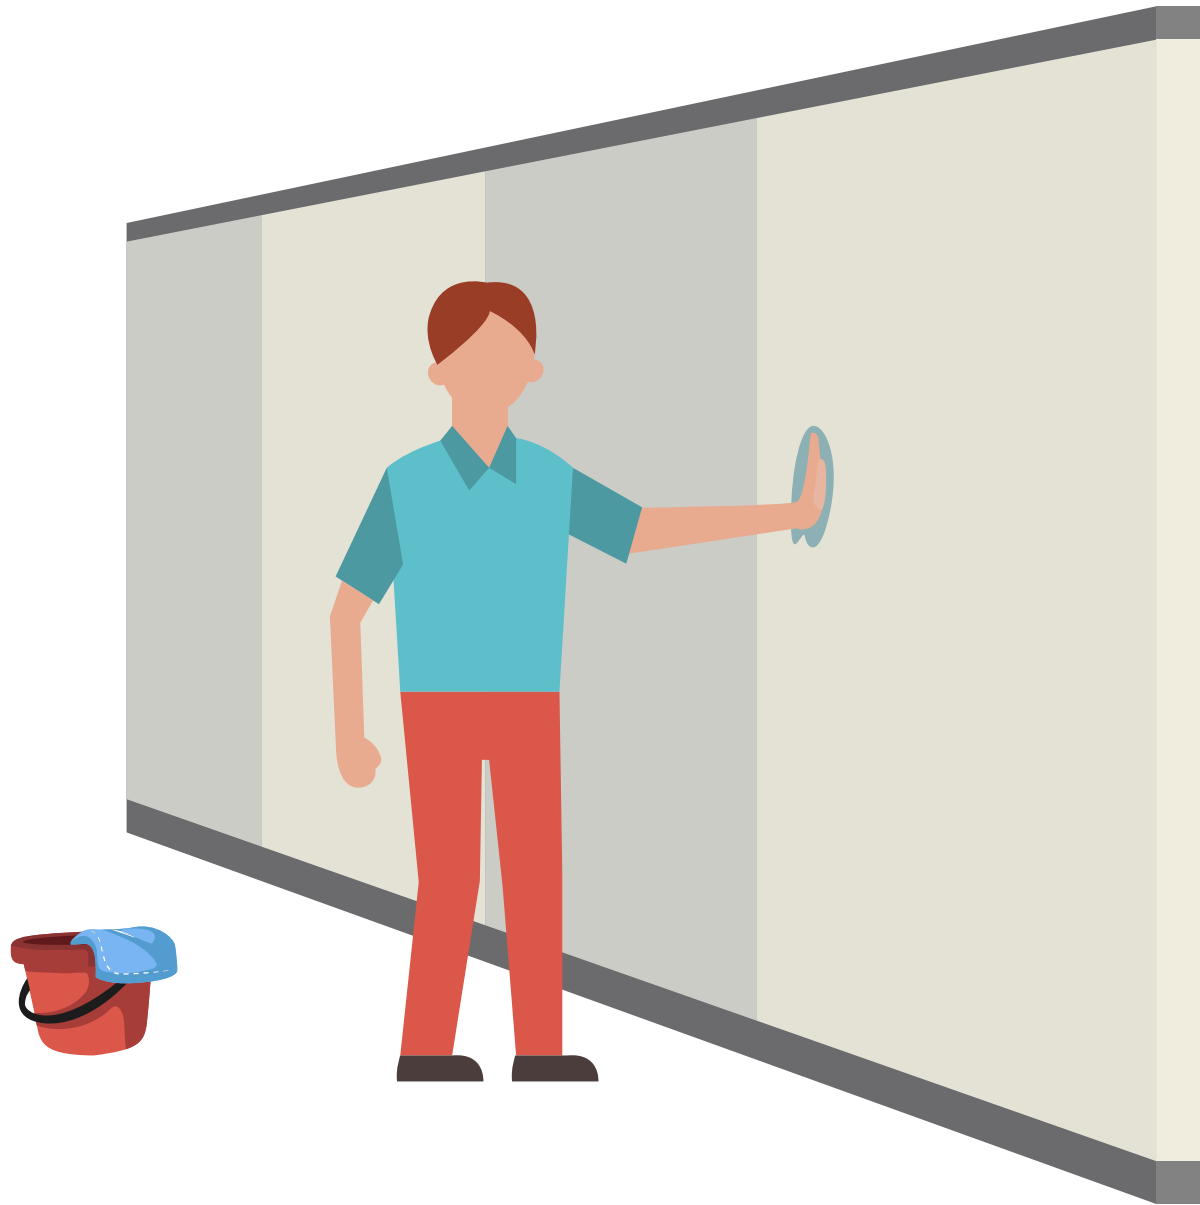

## 07\_Contact

If you have any questions about your moving wall system, or would like to find out more about our servicing packages, please get in touch:

**T:** +44 (0) 113 270 1239

**E:** [service@creatif.org.uk](mailto:service@creatif.org.uk)

[www.creatif.org.uk](http://www.creatif.org.uk)



**Do you have  
a question?**

Want to discuss  
servicing options?

**Get in touch!**